


# Philips 510 Guide

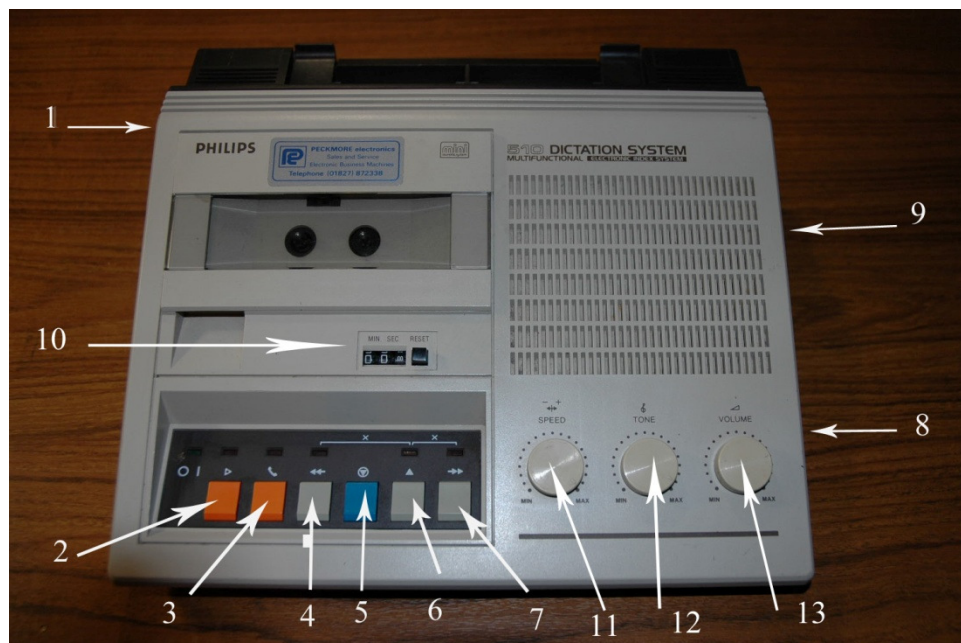

- 1\ On\_off Switch
- 2\ Search Button. Searches for electronic index marks (Rarely used)
- 3\ Telephone Button, Records Telephone conversation, when used with a Telephone adaptor
- 4\ Rewind Button
- 5\ Stop Button
- 6\ Play Button
- 7\ Fast Forward Button
- 8\ Speaker Switch. (Switches between Headset & Internal Speaker)
- 9\ Automatic Back-Space Switch. Tape will rewind a set distance when Foot control is released.(Select 0 to disable)
- 10\ Tape Counter. Press Button to Zero.
- 11\ Speed Control. Adjusts Tape Speed on Playback Only
- 12\ Tone Control. Adjusts sound on Playback Only
- 13\ Volume Control. Adjusts sound on Playback Only

**To Fast Erase      Press Rewind and Play Buttons together**